



HP LaserJet 1160 or 1320 Control Panel Replacement

Written By: jrw01





TOOLS:

- [Metal Spudger Set](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [HP LaserJet 1160 or 1320 Control Panel](#) (1)

Step 1 — Left Side Cover




- Pull on the two tabs on the back of the printer to release the left side cover.
- Remove the cover by rotating it towards the front of the printer.

Step 2 — Right Side Cover




- With the printer turned so that the right side is facing upwards, use a metal spudger to disengage 3 tabs holding the right side cover in place.
- Lift the cover off of the printer.

Step 3 — Back Cover

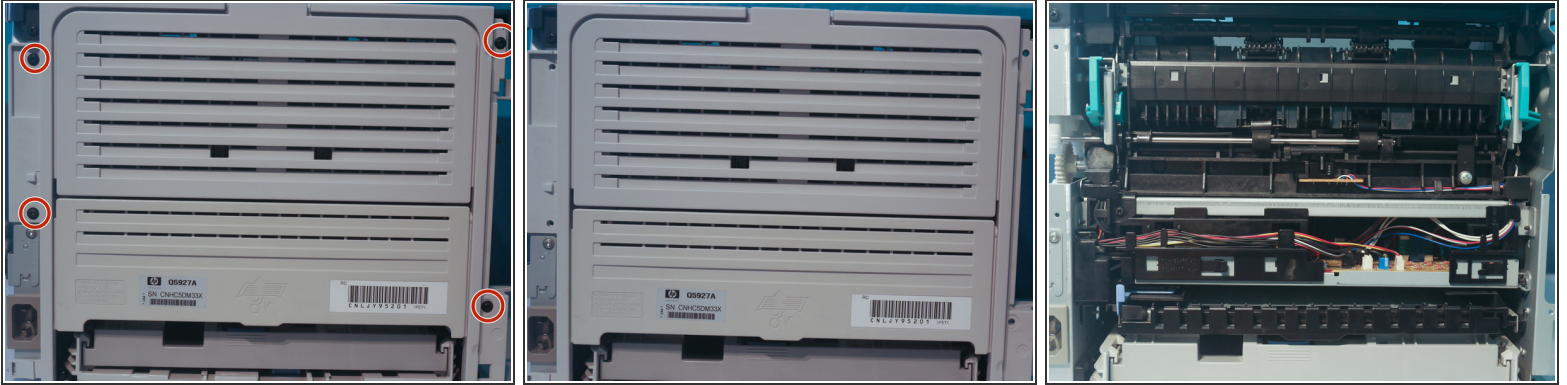


- Remove 4 screws on the back of the printer.
- Remove the back cover.

Step 4 — Top Cover

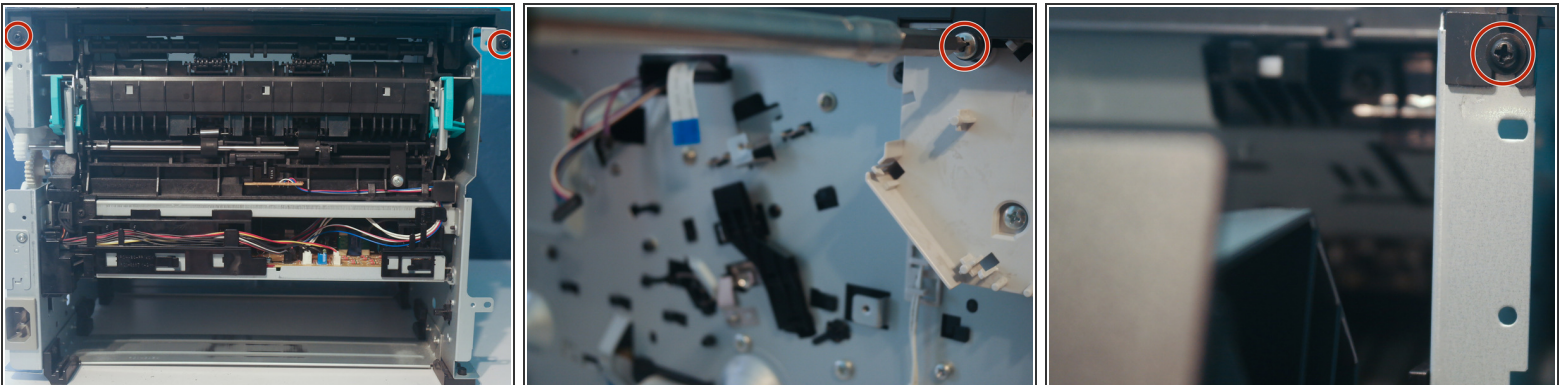



- Remove 2 screws on the back of the printer, one on the left, and one on the front.
- ⓘ The second image shows the formatter removed, but it is not necessary to remove the formatter to replace the top cover.

Step 5 — Top Cover

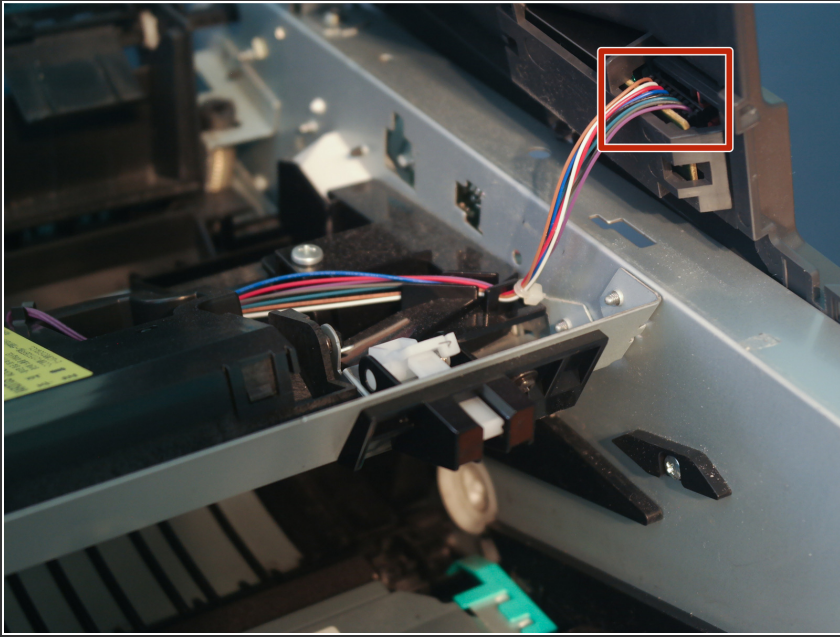

- Disconnect the control panel cable and remove the top cover.

Step 6 — Control Panel

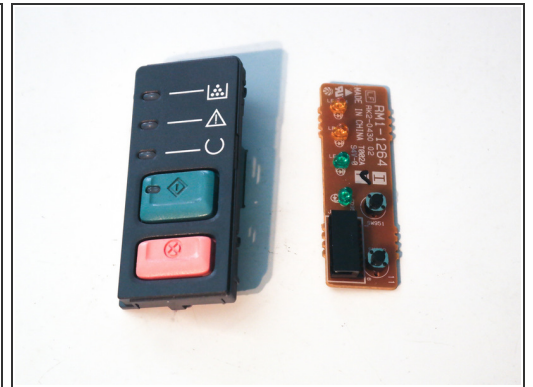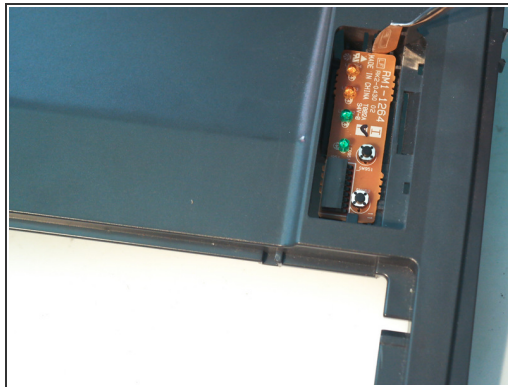

- Use a metal spudger to remove the control panel and its circuit board from the top cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 07:34:51 PM.